




Assembly and Operation Guide



ARBOR MAX / ARBOR CANTILEVER

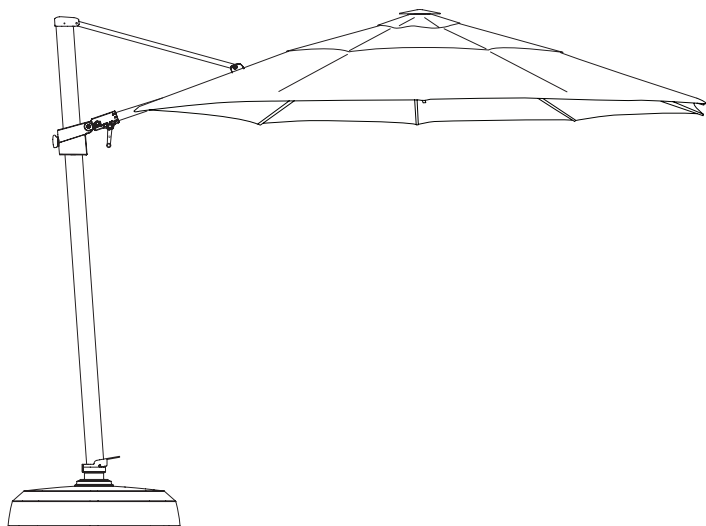

AG25TR213 13' octagon



AG25TR2 11.5' octagon



AG25TSQR2 10' square




AG25TR210 10' octagon

Thank you for purchasing Treasure Garden's Arbor MAX / Arbor Cantilever.
Please remove all contents from the package, inspect and review checklist.
Some parts may be included in the styrofoam packaging.
Do not discard any packaging or box until assembly is complete.

CHECKLIST

- | | |
|------------------------------|---|
| A - (1) 360° Rotation Hub | I - (1) Crank Handle |
| B - (1) Foot Pedal | J - (1) Canopy Support Strut |
| C - (1) Hardware Assembly | K - (1) Finial |
| D - (1) Main Frame | L - (1) Canopy |
| E - (1) Adjustment Knob | M - (7) Spring Loaded Rib End Cap |
| F - (1) Open/Close Mechanism | N - (1) Valance (optional; not shown) |
| G - (1) Tilt Mechanism | O - (1) Light Adapter (light sold separately) |
| H - (1) Tilt Degree Scale | P - (1) Protective Cover |

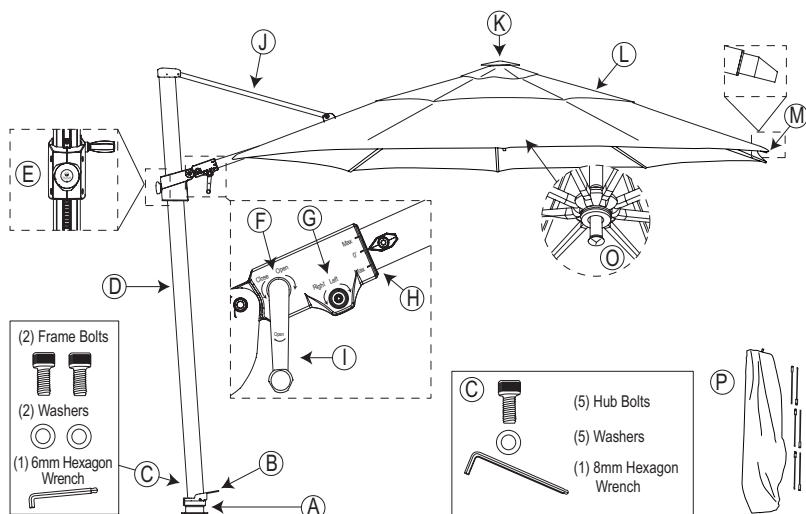

IMPORTANT:

Prior to assembly it is important to decide on the location of the umbrella.

- Allow ample height to avoid damage to your umbrella during assembly and usage.
- Choose a location that is level and sturdy.
- Avoid any sloping of soft ground.
- Consider a location that will maximize the umbrella's 360° rotating function. Placing the umbrella between two entertaining areas is ideal.

CAUTION:

- Fully assembled, the umbrella weighs over 300-400 lbs. Moving umbrella fully assembled will increase the risk of damage to your umbrella and/or can cause serious injury. We recommend a two-person team for assembly and disassembly.

**NOTE: REFER TO SEPARATE BASE OR MOUNT KIT MANUAL
FOR BASE ASSEMBLY PRIOR TO PROCEEDING.**

IMPORTANT:

For free standing base applications, it is imperative to install the appropriate base for your size cantilever. The minimum base weight required for each size is:

- 13' Arbor MAX (AG25TR213) is 400 lbs.
- 11.5' Arbor (AG25TR2), 10' Arbor (AG25TSQR2/AG25TR210) is 200 lbs.

STEP 1 UMBRELLA ASSEMBLY


Two-persons recommended for team lift and to complete assembly.

With the umbrella laying on a soft clean surface, remove rotation hub from main frame by removing the (2) bolts and (2) washers using a 6mm hexagon wrench, and slide rotation hub out from bottom of main frame (Fig. 1). Attach rotation hub to pre-assembled base or mount kit with (5) supplied hub bolts and securely tighten with 8mm hexagon wrench.


Now with rotation hub installed, carefully lift umbrella and insert main frame onto the rotation hub (Fig. 2). Assembled in upright position, insert the (2) bolts and (2) washers and tighten using 6mm hexagon wrench provided (Fig. 3).

**REMOVE ALL PLASTIC PACKAGING MATERIAL FROM ALL PARTS PRIOR TO
OPENING UMBRELLA. CHECK UNDER CANOPY FOR PACKAGING AROUND RIBS.**


Your umbrella is now ready for use!

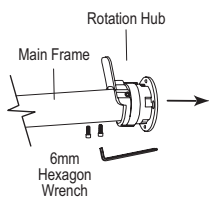


(Fig. 1)

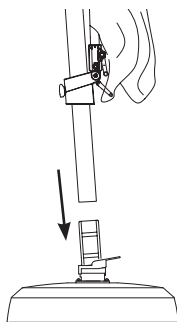

(Fig. 2)

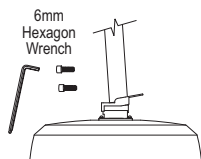


(Fig. 3)

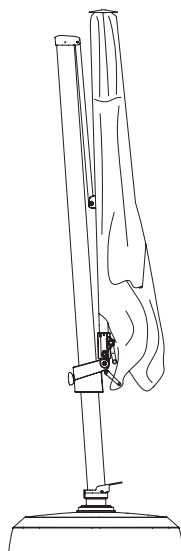


STEP 2 OPENING UMBRELLA

IMPORTANT: To avoid personal injury or damage to the umbrella, make sure the area behind you is clear and free from any furniture or structure.

Position yourself behind umbrella. In the closed position, turn adjustment knob counter clockwise (Fig. 4) and slide the adjustment knob upward (Fig. 5). Turn adjustment knob clockwise to tighten and secure in place.

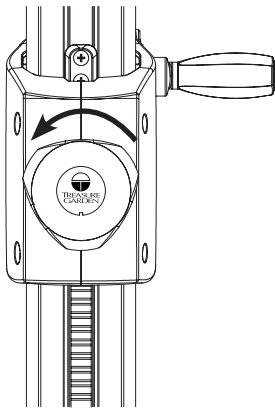


(Fig. 4)

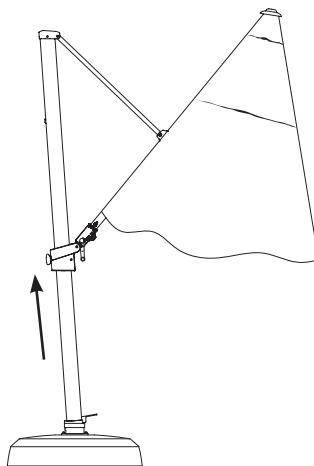


(Fig. 5)

Insert crank handle into "Open/Close" socket in crank mechanism (Fig. 6). Turn crank handle clockwise until the canopy is fully open (Fig. 7). **CAUTION:** Stop turning the crank handle as soon as the umbrella canopy is completely open and the sleeve on the umbrella center pole has reached its maximum height.

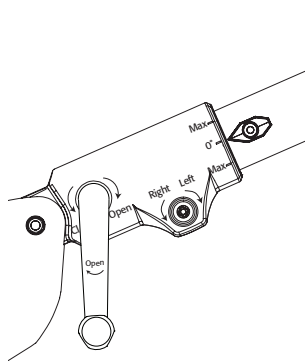

(Fig. 6)

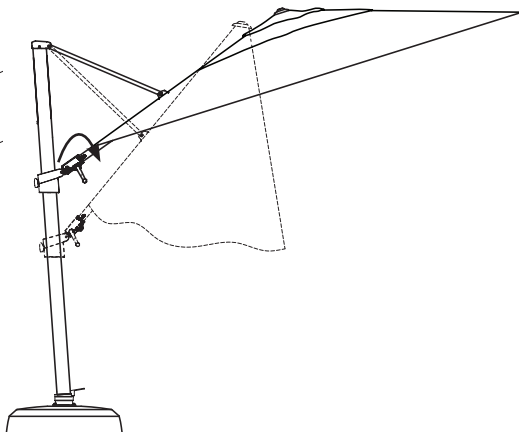

(Fig. 7)

STEP 3 TILTING UMBRELLA


To Tilt Canopy Vertically:

IMPORTANT: PRIOR TO USING TILT FEATURE.


To avoid personal injury or damage to the umbrella, make sure the area behind you is clear and free from any furniture or structure.

Position yourself behind umbrella. Turn adjustment knob counter clockwise to disengage from track (Fig. 8), and slide car up and downward until desired degree of vertical shade is reached (maximum back angle of 30° from ground level) (Fig. 9). Tighten the adjustment knob clockwise to lock its position.

WARNING: Make sure tilt is secure in track. Do not tilt umbrella past the track. Keep hands free of main frame while moving slider car up and down. Do not use tilt function during winds.

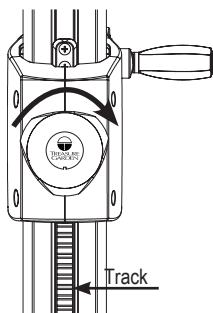

(Fig. 8)

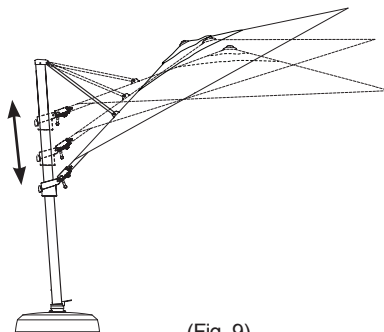

(Fig. 9)


To Tilt Canopy Horizontally:

IMPORTANT: PRIOR TO USING VERTICAL AND HORIZONTAL TILT FEATURE.


To avoid personal injury or damage to the umbrella, make sure the area behind you is clear and free from any furniture or structure.

Insert crank handle into "Right/Left" socket in crank mechanism (Fig. 10). To tilt canopy right, turn crank handle counter clockwise. To tilt canopy left, turn crank handle clockwise.

NOTE: We do not recommend tilting vertically and horizontally at a maximum tilt degree for a prolonged period of time. Doing so may result in damage to umbrella. Do not use tilt function during winds.

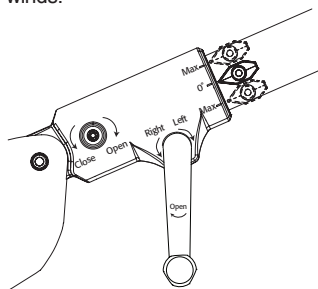

(Fig. 10)

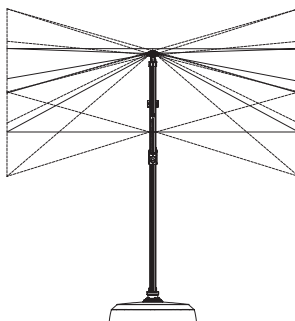



STEP 4

ROTATING UMBRELLA

IMPORTANT: PRIOR TO USING ROTATION FEATURE.

To avoid personal injury or damage to the umbrella, make sure the area behind you is clear and free from any furniture or structure.

Place your foot on the foot pedal of the rotation hub and *step-on* the pedal to release rotating lock (Fig. 11). Place hands on the main frame and rotate the umbrella frame in either direction, in 90° increments. To lock position, step off the foot pedal to engage rotating lock.

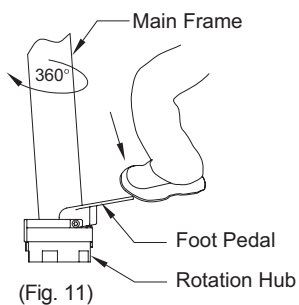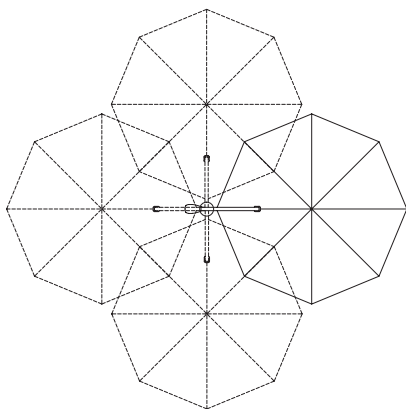

STEP 5

LIGHT ADAPTER FEATURE

To Attach Umbrella Light: *(light sold separately)*


- Loosen the light adapter built into the umbrella runner by turning counter-clockwise (Fig. 12).
- Pull down light adapter post to attach the umbrella light (sold separately) (Fig. 13).

To Remove Umbrella Light and Close Light Adapter:


- Remove umbrella light from light adapter post.
- Gently push up the light adapter post back into umbrella runner and tighten turning clockwise (Fig. 12).

Note:

- It may be necessary to lower umbrella to a reachable height to pull light adapter down and attach umbrella light.
- It is not necessary to remove light to close umbrella.

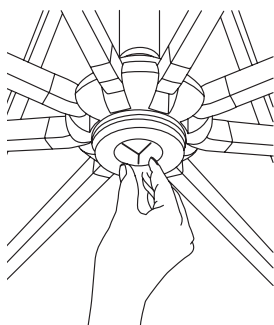

(Fig. 12)

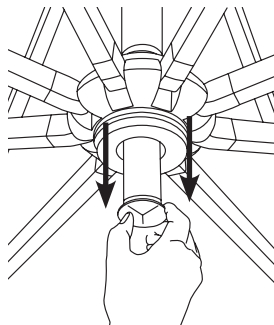

(Fig. 13)


STEP 6

CLOSING UMBRELLA


IMPORTANT: To avoid personal injury or damage to the umbrella, make sure the area behind you is clear and free from any furniture or structure.

Position yourself behind umbrella. Insert crank handle into "Open/Close" socket in crank mechanism (Fig. 14). Turn crank handle counter clockwise until the canopy is closed (Fig. 15). Turn adjustment knob counter clockwise and slide downward until umbrella is in closed position. Tie string around canopy to secure canopy.

NOTE: Prior to closing ensure that the canopy is in a level (non-tilt) position. Properly store umbrella when not in use.

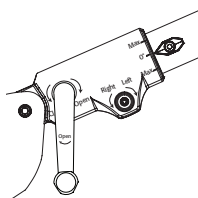

(Fig. 14)

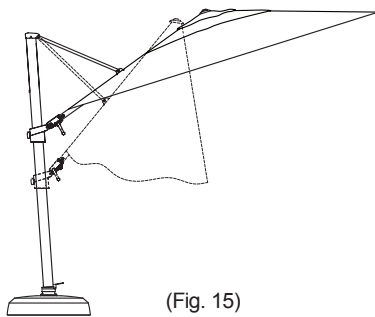


(Fig. 15)


STEP**PROTECTIVE COVER**

After closing umbrella, cover umbrella with provided protective cover when not in use.


- Join the (3) rods together (Fig. 16).
- Slide rod into slot of protective cover (Fig. 17). Let end of rod slide back into built-in pocket.
- Unzip protective cover (Fig. 18).
- Using rod as a guide, slide protective cover over cantilever.
- Push canopy structure slightly in and pull string to zip close your protective cover (Fig. 19).

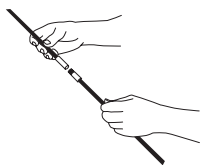



(Fig. 16)

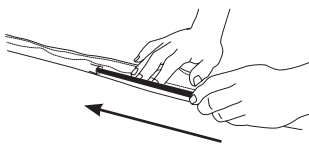

(Fig. 17)

 

(Fig. 18)

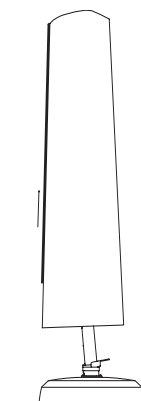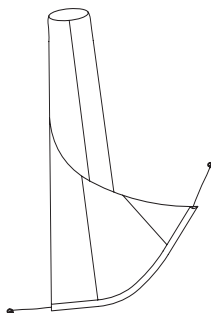

(Fig. 19)

SAFETY PRECAUTIONS

- To reduce risk of personal injury in which a person is injured or harmed, and/or damage to personal property, read and follow the Assembly Guide prior to assembling and operating umbrella and base.
- Close and store the umbrella in windy conditions or when a storm approaches. Never allow the umbrella to flap in the wind; this could cause personal injury, damage to personal property, damage to umbrella and/or umbrella canopy. Do not use tilting function during windy conditions.
- Keep umbrella secured to umbrella base at all times.
- Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.
- When adjusting the umbrella, make sure that no person(s), item(s) or personal property are close to the umbrella. This is important to prevent injury or material damage.
- Do not allow children to play on or with umbrella or umbrella base.
- When adjusting or assembling the umbrella or umbrella base, make sure fingers, toes or any other parts of the body are clear from moving parts. Failing to do so may result in serious injury.

CARE AND MAINTENANCE

- When not in use, close and cover umbrella with provided protective cover.
- Allow a wet canopy to dry while in open position, but do not leave unattended.
- If necessary, clean the fabric with lukewarm water, mild detergent, and a sponge.
- Wipe sliding marks on the aluminum poles with a damp cloth.

Winter Storage:

- Store in a dry place.

After the Winter:

- Check the condition and function of the umbrella. Any defects must be repaired by a professional.

TO PROPERLY FOLD CANOPY:

The canopy will last longer if you fold it as it was packed and shipped. This technique is similar to the way a parachute is folded and is especially important when folding the canopy for seasonal storage or when left in the closed position for an extended period of time.

Using this technique at all times will significantly extend the life of the canopy.

- When the umbrella has been fully closed, stand in front of the canopy structure and begin the folding process by pulling out two panels opposite the main frame. Pull the two panels together and roll tight into the canopy.
- Once rolled tight, pull adjacent panels out one at a time and fold to the center, alternating sides until all the panels have been pulled out from the arms and folded into the center.
- Tie string around canopy and cover umbrella with provided protective cover.



WARRANTY:

Treasure Garden warrants this product (for residential use **ONLY**) to be free from defects in original materials and workmanship for a period of 2 years from the date of purchase. If a defect in the original material or workmanship appears during the warranty period, Treasure Garden will (at its discretion) repair or replace the product without charge.

Simply contact your original authorized Treasure Garden dealer with a description of the defect. The dealer will verify the defect and work closely with Treasure Garden to obtain the necessary service. In many cases, simple problems can be solved with a replacement part that can be shipped directly to the dealer for professional installation / repair.

Tampering with or altering the product will void warranty.

In the event that warranted factory service

is required, Treasure Garden will assume the responsibility of the return freight charges for the first year only.

Returned product that (upon receipt and inspection) is deemed to be "not covered" under our warranty, will be shipped / billed at your expense.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

RUST: Rust is a natural part of the aging process of steel or iron based materials, and is therefore **NOT** considered a defect.

NOTE: Failure caused by unreasonable or abusive use, or failure caused by neglect of reasonable and necessary care are not covered by this warranty.

Additionally, acts of nature (including but not limited to wind, hurricanes, tornadoes, and storms) are not covered by this warranty.



www.treasuregarden.com

©2026 Treasure Garden, Inc. - All Rights Reserved.
v.08.03.26